

CONVERSION KIT INSTRUCTIONS

Carefully unscrew the transducer end of the unit and unplug the cap from the unit by gently pulling on the two wires. Next, locate the switch box on opposite side of the circuit board. Use a paper clip to move switches. If converting from an SM-5A to an SM-5, move the beam frequency switch (2nd from left) forward into the 400kHz position. If converting from an SM-5 to an SM-5A, move the beam frequency switch (2nd from left) back into the 200kHz position. Take the new transducer cap and connect it to the jack inside the unit using a tool or your fingers. The black wire should be on the right side of the jack. Slowly screw the cap on so as to not damage the wires.

For Technical Assistance
Call 703 759 0511

