

Speedtech Deerhunter's EDGE™ Model HE-1

Speedtech ECO EDGE™ Model EE-1

User's Manual

Speedtech Deerhunter's EDGE™

Model: HE-1

Speedtech ECO EDGE™

Model: EE-1

User's Manual

INTRODUCTION

Congratulations on purchasing the Speedtech EDGE™. You now have a technologically advanced instrument, which will maximize your outdoor experience.

SCIENTIFIC BASIS

Wildlife scientists have documented daily activity patterns in animals as diverse and different as marine worms and humans. These daily or circadian rhythms are believed to result from an interaction between hormonally triggered reactions in the animals and cyclic environmental events. Combined, these factors control a wide array of animal functions and behavior including reproduction, feeding, growth, thermal regulation, body condition and, perhaps most important, seasonal and daily movements.

While environmental phenomena such as cyclic changes in moon phase and position relative to the earth have been used to predict animal behavior with some success, other environmental factors also play an important role. Photoperiod and sun position have been conclusively demonstrated to affect the behavior of large game animals, deer and elk in particular. In addition, seasonal weather patterns, local

weather events, and air temperature all have been identified in scientific studies as very important factors influencing the activity and behavior of these large game animals. Most often these activities are related to the physiological demands of maintaining optimal foraging and resting times.


The environmental conditions affecting this behavior have been combined into a single algorithm used to determine optimal activity times. The factors and relationships used in the instrument were obtained through an extensive study of the scientific literature, and use of well documented animal behavior studies. This information, combined with discussions with wildlife biologists, has contributed to the development of the software used in these units.

FEATURES

- Moon phase & moonrise/moonset position
- Sun position / sunrise & sunset times
- 12–24 hour weather forecast
- Present & 4-hr future activity prediction
- 97-year activity forecast based on future sun/moon information
- 97-year almanac
- Real-time calendar clock
- Barometer / 16 hour history
- Severe weather audio warning
- Temperature: actual or estimated
- Altitude
- Digital compass
- Key lock function
- EL back light

IMPORTANT NOTE: The Speedtech EDGE includes two CR2032 batteries necessary for operation. To maintain their maximum life during storage and shipping, these batteries have not been installed. See the Battery Information section for instructions.

CONTROL BUTTONS

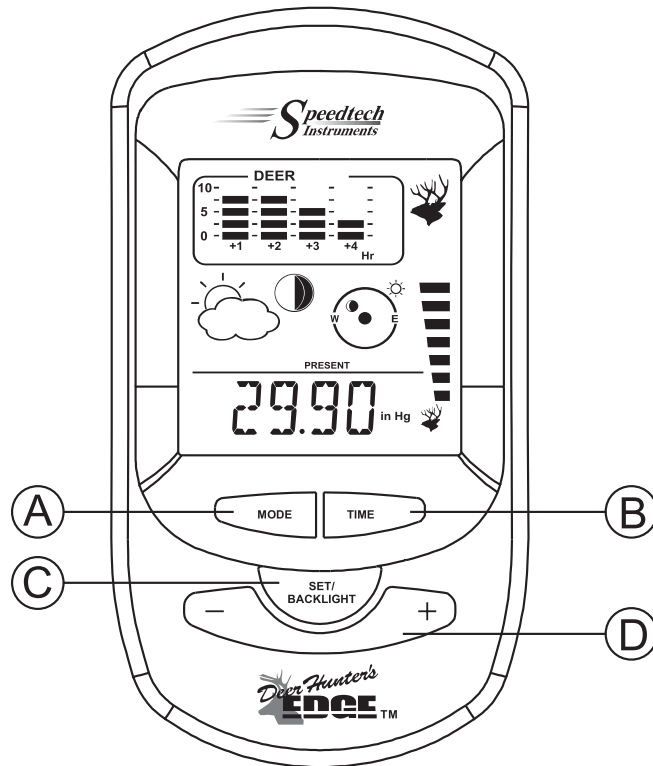

A. MODE/POWER BUTTON

Changes the display mode or turns the unit on and off.

B. TIME/LOCK BUTTON

Displays the current or future mode or locks and unlocks the control buttons


C. SET/BACKLIGHT BUTTON

Activates back light or enters the setting procedure

D. UP (+)/DOWN (-) BUTTONS

Changes parameter values

INDICATORS

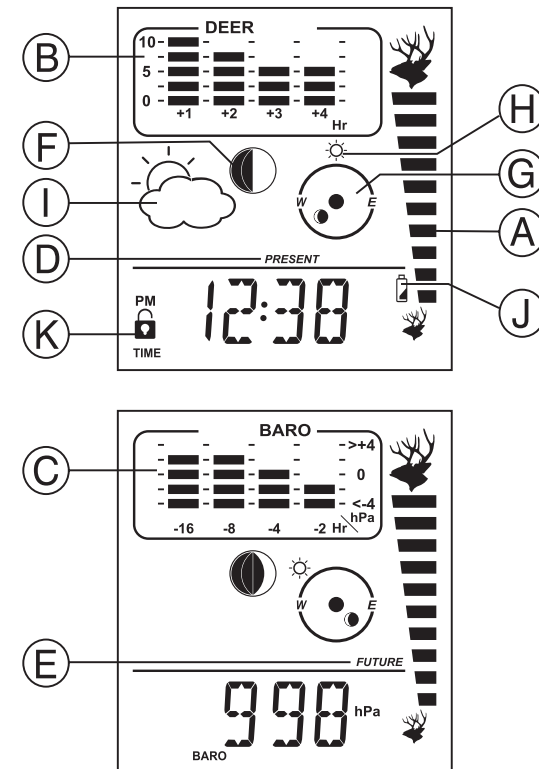

A. ACTIVITY PREDICTION METER

Indicates the magnitude of activity

B. ACTIVITY PREDICTION BAR GRAPH

Indicates the magnitude of activity for the next four hours

C. BAROMETRIC PRESSURE BAR GRAPH

Indicates the barometric pressure value for the past 16 hours

D. PRESENT MODE

Shows prediction for the current date and conditions

E. FUTURE MODE

Shows prediction at the set date and time

F. MOON PHASE

Indicates the phase of the moon

G. MOON POSITION

Indicates the position of the moon

H. SUN POSITION

Indicates the position of the sun

I. WEATHER FORECAST

Indicates the weather conditions for the next 12 to 24 hours

J. LOW BATTERY

Indicates the batteries are running dry

K. KEY LOCK

Indicates the control buttons are locked


BATTERY INFORMATION

The unit uses two CR2032 lithium batteries. For your convenience, a small screwdriver is provided to remove the back cover.

To Install and Change Batteries:

1. Remove battery compartment cover on backside of instrument. This requires removal of the three (3) small screws with a No. 0 to No. 1 Phillips head screwdriver. Be sure the + side of your fresh CR2032 battery is facing up.
2. Place the battery(ies) in the circular compartment.
3. Gently press battery until battery is seated flat in battery compartment.
4. Securely replace the battery compartment cover with the three (3) screws.

A low-battery indicator will light up on the display screen when the batteries are running low.

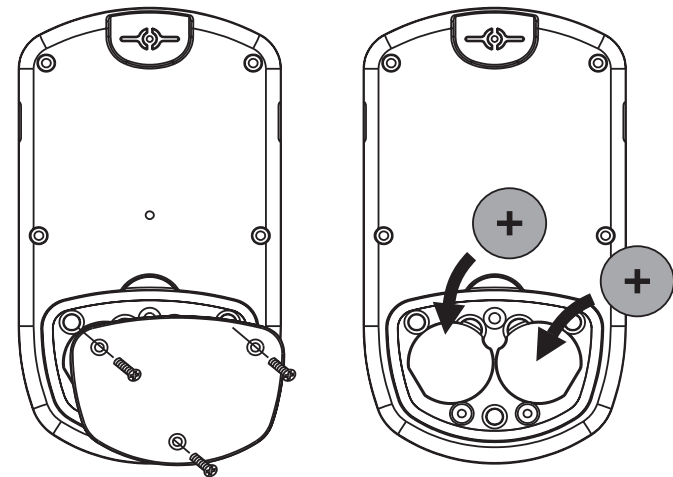

Battery Life:

After batteries are installed, they have a life expectancy of up to eight (8) months if the unit is never turned on. With moderate use, battery life is expected to be at least six (6) months.

If user wants to COMPLETELY TURN OFF the unit and maintain battery life, remove the batteries from the unit. A piece of tape may be placed between the batteries and the battery contact to store the unit and maintain fresh battery life.

1. The unit will keep the memory for time zone, altitude, latitude and longitude even when the batteries are replaced. Press SET to bypass the setting procedure, should the above information still be applicable.

TURNING UNIT ON OR OFF

Press and hold **MODE/POWER** for two seconds to turn the unit on or off.

Upon battery installation, the unit will start to measure barometric pressure data every 15 minutes. Monitoring of the barometric pressure data will continue even while unit is turned off, and will store this information for future use.

Once the unit has been turned on, the weather forecast will appear as half-cloudy/half-sunny. The Speedtech EDGE will need approximately 2 to 3 hours of accumulated data to calculate the trend of the weather change and report an accurate weather forecast.

The unit turns itself off automatically after 5 minutes. However, the barometric pressure sensor and the Severe Weather Alarm will continue to function unless the batteries are removed.

THE BACK LIGHT

The back light feature allows for display readability in low light situations. To activate back light feature, press SET/BACKLIGHT button once. Back light will be deactivated automatically after four seconds.

THE KEY LOCK

The control buttons may be locked to avoid accidental changes. To activate lock, press and hold TIME for two seconds. Repeat the procedure to unlock buttons. NOTE: this feature will be disabled when the unit turns itself off.

HOW TO SET THE PARAMETERS

Please refer to the TIME ZONE, ALTITUDE, LONGITUDE & LATITUDE SOURCES to gain specific geographic coordinates prior to beginning the parameter entry process as follows:


1. Press and hold SET. The hour digits will blink.



2. Choose 12 Hr or 24 Hr clock/Use + button to change. Press SET. The hour digits will blink. Use UP(+) or DOWN(-) to enter the hours. Pay attention to AM or PM.




3. Press SET. The minute digits will blink.
4. Use UP or DOWN to enter the minutes.
5. Press SET. The month digits will blink.
6. Use UP or DOWN to enter the month.

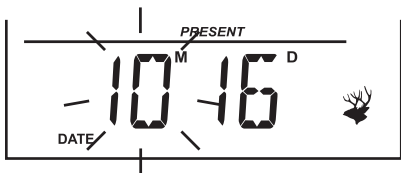


7. Press SET. The day digits will blink.
8. Use UP or DOWN to enter the day.
9. Press SET. The year digits will blink.
10. Press UP or DOWN to enter the year.




11. Use UP or DOWN to enter barometric unit. You may select hPa (millibars/hPa) or inHg (inches of Mercury). Press SET.

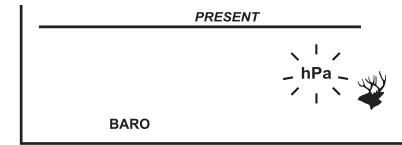


12. Altitude in Ft display will blink. Use + to select Ft or m. Press SET.

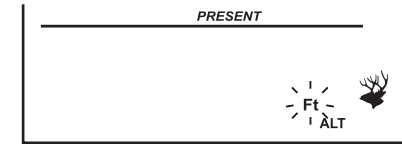

13. Temperature unit will blink. Use + to select F or C. Press SET.

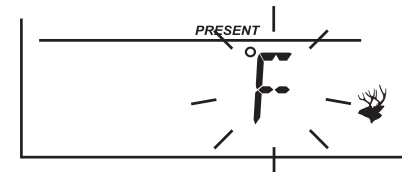


14. Time zone will blink. Use UP or DOWN to enter time zone. *see time zone source following.

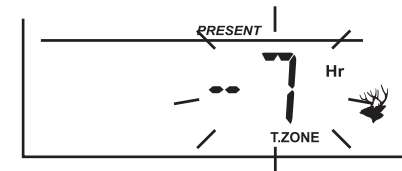

15. Press SET. Altitude calibration setting will blink.
16. Use UP or DOWN to enter altitude in **feet or meters**. (**1 meter = 3.2808 feet**). Your current altitude will be displayed in either feet or meters as selected in #12 above. These are two different functions.



- 17. Press SET. Latitude N will blink.
- 18. Use UP or DOWN to enter Latitude direction. You may select N for north or S for South.

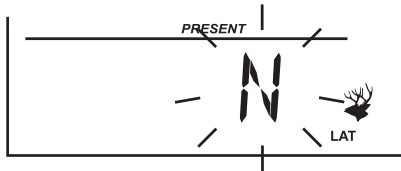

- 19. Press SET. Display will blink.




- 20. Use UP or DOWN to enter Latitude degrees.
- 21. Press SET. Display will blink.
- 22. Use UP or DOWN to enter Latitude minutes.



- 23. Press SET. Display will blink.

- 24. Use UP or DOWN to enter Longitude direction. You may select E for east or W for west.

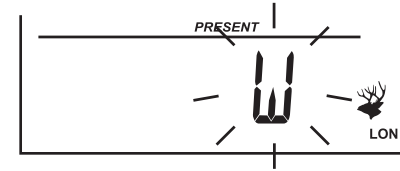

- 25. Press SET. Display will blink.
- 26. Use UP or DOWN to enter Longitude degrees.



- 27. Press SET. Display will blink.
- 28. Use UP or DOWN to enter Longitude minutes.



- 29. Press SET to finish.

You have successfully completed the parameter entry of your Speedtech EDGE.

TIME ZONE, ALTITUDE, LATITUDE AND LONGITUDE SOURCES

The Speedtech EDGE makes its calculations based on the data entered for the time, date, time zone, altitude, latitude and longitude. The following information is supplied to assist you with accurate data during your parameter entry.

The time zone value is derived by subtracting GMT (Greenwich Mean Time) from the local time. You may select from -12 to +14 hours. Be sure you make adjustment for daylight saving (DST) when applicable. Find your location on the chart shown and use the accompanying number during parameter entry. EXAMPLE: On the chart, Eastern Standard Time is -5. For Daylight Savings Time, the Eastern time becomes -4. For North America, time zone must be a negative number.

Location:	Time Zone Value	Location:	Time Zone Value
Greenwich, England	0	Mid Europe/Africa	1
Ireland, Scotland, Portugal, Iceland, Morocco		France, Germany, The Netherlands, Belgium, Austria, Spain, Italy, Swizerland, Sweden, Norway	
SE Greenland	-1	E Europe, E Central Africa	2
		Greece, Finland, Turkey, Israel, Zimbabwe	
Altantic Ocean	-2	Moscow, Mid-East, E Africa	3
Greenland Time	-3	NW Caspian Sea	4
Atlantic Time	-4	Ural Mountains, Russia	5
Eastern Standard Time	-5	Almaty (Alma ATA), Russia	6
Central Standard Time	-6	W Mongolia	7
Mountain Standard Time	-7	China, Western Australia	8
Pacific Standard Time	-8	Japan	9
Alaska Time	-9	Eastern Russia; Eastern Australia	10
Hawaii	-10	Kamchatskiy, E Russia	11
Pacific Ocean	-11	Internal Date Line East	12
International Date Line West	-12	New Zealand, Fiji	
		Rawaki Islands: Enderbury Kiribati	13
		Line Islands: Kiritibati	14

* To use the unit at higher altitudes, it is important to enter the altitude compensation in the setting procedure.

FINDING YOUR LATITUDE/LONGITUDE/ELEVATION

For North America: use www.wunderground.com. Enter your zip code or city/state. Scroll below town name for elevation. For LAT/LON in degrees and minutes, click on Google Maps at far right.

If you know your Lat/Long as a decimal, you can convert to minutes by multiplying the decimal numbers by 60.
EXAMPLE: For Lat 35.407 , multiply $.407 \times 60 = 24.42$.
Lat = 35 24' (Round to nearest whole number.)

If you have a GPS, the Lat/Long should come up when you first turn on the unit. Many GPS units also provide elevation.

If you do not use the Internet and do not own a GPS, call your local airport, which can provide the Lat/Long/Elevation of the airport. Some airports can give you information on surrounding areas.

Remember that most local libraries have Internet access, or you may ask the Reference Librarian to check www.wunderground.com, or other sources, for the Lat/Long/Elevation information you need.

International Locations: You may use www.mapquest.com and select World Atlas or www.worldatlas.com.

DISPLAY MODES

To scroll through the current time, date, year, barometric pressure, sunrise time, sunset time, altitude, compass, temperature, press MODE.

To change between the present and future mode, press TIME.

BAROMETRIC HISTORY

The built-in barometer senses the changes in barometric pressure every 15 minutes. To check the barometric pressure, press MODE to display BARO. The pressure history for the past 16 hours will be displayed in the pressure chart in four columns, reading left to right.




ACTIVITY METER AND BAR GRAPH

In **Present Mode**, the activity prediction meter and bar graph show the intensity of activity at present and up to 4 hours in the future.

In **Future Mode**, activity for a certain date and time is shown, based only on future sun/moon information.

If you travel over a large distance and/or significantly change altitude, you must re-set the pertinent parameters after reaching your destination. Wait at least one hour for an accurate activity prediction.

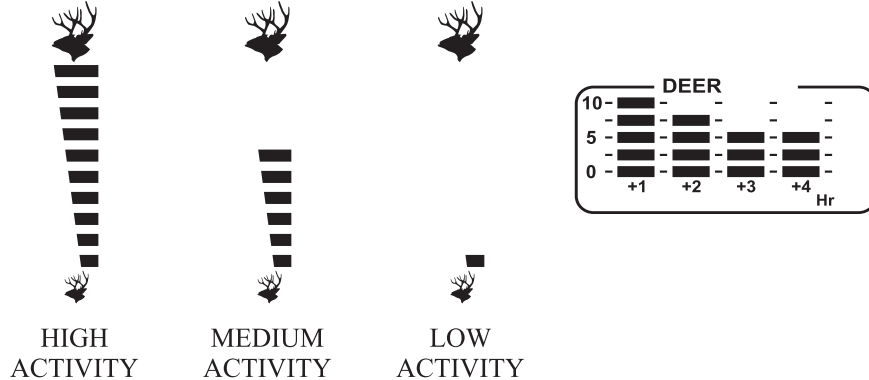

ALTIMETER

In the Altimeter mode, the current altitude will be shown in either feet or meters. Keep in mind that altitude is a function of barometric pressure and will change accordingly. For example, a low pressure weather system will make the unit think that it is at a higher altitude. A high pressure system has the opposite effect. If you are climbing or descending, the altitude should be adjusted at regular intervals to maintain the correct barometric pressure for an accurate activity prediction.

COMPASS

To calibrate your compass, put the Speedtech EDGE in compass mode. Press and hold SET/Backlight till CAL blinks. Put the unit on a flat surface or hold it so the LCD is horizontal, and slowly rotate the instrument 2 times in a full circle. Then press SET. This will adjust it for deviation. The compass is dampened and is accurate to $\pm 5^\circ$.

NOTE: You should take at least 30 seconds for each full rotation and this function should be done in a magnetic-free environment. For example: do not try to calibrate the unit next to a computer, in a motorized vehicle, or next to appliances operation on 60-cycle current.

TEMPERATURE

Put the unit in temperature mode. The actual temperature (wherever the unit is located) is displayed. If you want to input a different temperature (of a different location), to achieve a more accurate prediction, press and hold SET until the temperature blinks. Change the temperature using the \pm buttons. Press SET. To see any change in the activity prediction, return to the current time mode. The estimated selection will end automatically after 5 minutes and default to the actual temperature. The prediction, based on the estimated temperature, will display for 5 minutes, during which the deer head icon will flash.

HOW TO SET THE FUTURE MODE

The future mode allows you to preview the activity prediction on a certain date and time. You will be able to change the time zone, etc. separately in FUTURE mode without modifying your initial set up parameters. To enter the parameters for the future forecast:





1. Press TIME to display the future mode.
2. Press and hold SET. The hour digits will blink.
3. Use UP or DOWN to enter the hours.
4. Press SET. The minute digits will blink.
5. Use UP or DOWN to enter the minutes.
6. Press SET. The month digits will blink.
7. Follow the same pattern to enter the month, day and year and press SET each time.
8. Time zone will blink. Use +/- buttons to change. Press SET.
9. Latitude N will blink. Use + button to choose N or S. Press SET.
10. Latitude degrees will blink. Use +/- buttons to change. Press SET.
11. Latitude minutes will blink. Use +/- buttons to change. Press SET.
12. Longitude W will blink. Use + button to choose W or E. Press SET.
13. Longitude degrees will blink. Use +/- buttons to change. Press SET.
14. Longitude minutes will blink. Use +/- buttons to change. Press SET.
15. Press TIME to exit FUTURE mode.

IMPORTANT FEATURE: For any day, including the current day, you can hold the + button and get an hour-by-hour scrolling prediction and the sun/moon positions will change accordingly. If you scroll past midnight, the date will also change.

1. Press TIME to display the future mode.
2. Use UP (+) or DOWN (-) to change the hour.

WEATHER FORECAST

The EDGE continuously monitors barometric pressure changes and maintains memory of barometric pressure history, even when the unit is turned off. The 12 to 24 hour weather forecast is based on the trends of the barometric pressure history. The effective range is 19 to 31 miles (30 to 50 km).

			
SUNNY	PARTLY CLOUDY	CLOUDY	RAINY

Note:

1. The accuracy of barometric pressure-based weather forecast is generally 75%. Thus, this instrument cannot be held responsible for inconveniences caused by an inaccurate forecast.
2. The weather forecast is meant for the next 12 to 24 hours and does not reflect the current condition.

- The sunny icon, when appearing at night, implies clear weather. Rain forecast can also imply snow.

SEVERE WEATHER WARNING

By definition, severe weather occurs when the barometric pressure changes by 6 millibars, (up or down) during a 3 hour period. Severe weather, including wind and rain, generally accompanies falling barometric pressure. Rising pressure will only result in high winds.


When the severe weather-warning feature is activated, the unit will give out an audio warning and flash the weather icon. The alarm is muted by pressing any button.

The barometer and severe weather alarm continue to function when the unit is off. The alarm will sound even if the unit is off, unless you disable the audio function.


To disable the severe weather warning, press and hold the DOWN (-) button for 3 seconds in present mode display. A beep will be sound. To enable the warning, press and hold the UP (+) button for 3 seconds in present mode display. A series

MOON PHASE, SUN AND MOON POSITIONS

The Speedtech EDGE is equipped with a moon phase scanner for years 2003 to 2099. The moon phase is indicated in eight symbols, including full, waning, quarter, waxing and new.

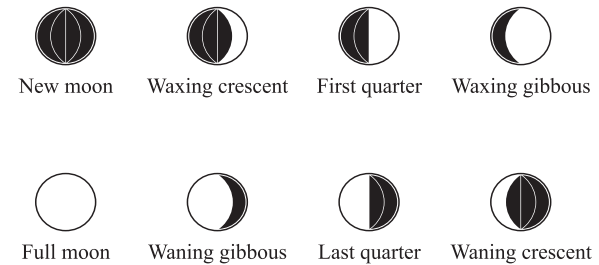

The moon and sun relative positions are also represented in eight positions, including rising, setting, overhead and underfoot.

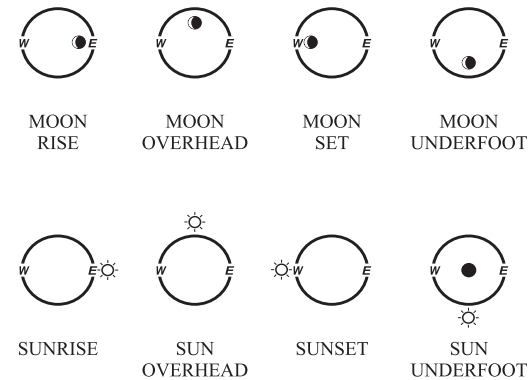

RESET BUTTON

A grey reset button is found inside the battery compartment. Depressing the reset button will erase all data, including barometric pressure histories and should only be used in the event of a malfunction of the EDGE. All parameter entry must be repeated in the event of reset.

CARRY POUCH

A carry pouch is included with the unit. The EDGE will fit in the pouch with or without the mounting bracket.

You can also attach the pouch to a belt using its Velcro belt loop.

HOW TO MOUNT THE UNIT

A mounting bracket is included for securing the EDGE on a wall or vertical surface. We suggest using Dual Lock, a self-adhesive, plastic hook-on-hook, 3-M product carried by hardware stores and Radio Shack. Dual Lock works well in a damp environment.

MAINTENANCE

The Speedtech EDGE is engineered to operate with precision for years, if handled properly. Do not subject it to extreme shock, electromagnetic influences or immerse it in water. Do not tamper with internal parts, as none are user-serviceable.

WARRANTY

Speedtech EDGE and all other Speedtech Instruments have a one-year warranty, as well as a 30-day as new return policy. Our website at www.speedtech.com has product specifications, answers to frequently asked questions, and user manuals can be downloaded.

For Technical Support, call Speedtech at 703-430-8055, 9 – 5pm (EST) Mon – Fri or email: info@speedtech.com.